

BMW R NINE T



M O U N T I N G I N S T R U C T I O N S

REF 7012

**RETROVISION
(BLACK COLOUR)**

REF 7559

**RETROVISION
(CARBON LOOK)**

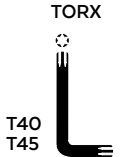

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula	Screen	1	1517F/H/N/WM3
2		Carcasa ABS	ABS fairing	1	10462
3		Soporte metálico derecho	Right metal support	1	SOPOR2P4-R-7012
4		Soporte metálico izquierdo	Left metal support	1	SOPOR2P4-L-7012
5		Casquillo Ø8,5xØ14x12mm	Ø8,5xØ14x12mm Arrowhead	2	CASQUI-----0083
6		Tornillo allen M8x40 DIN912	M8X40 DIN912 Allen screw	2	TORNI-AD912-475
7		Silentblock M5	M5 silentblock	7	SILENBTM5-046/1
8		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 allen screw	7	TORNI-I7380-493
9		Arandela nylon M5x1	M5x1 nylon Washer	7	ARNV00000000245
10		Kit adhesivos	Stickers set	1	ADHESI-----208
11		Tapón tornillo M5 ISO7380	M5 ISO7380 Screw cap	7	TAPON-----85


BMW R NINE T

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


**DISASSEMBLY
DESMONTAJE**

A Tornillería original
Original screws

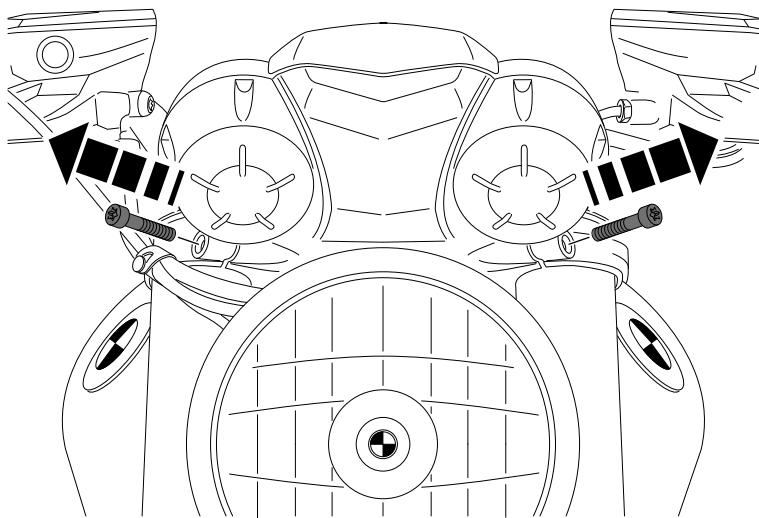


2

**ASSEMBLY
MONTAJE**

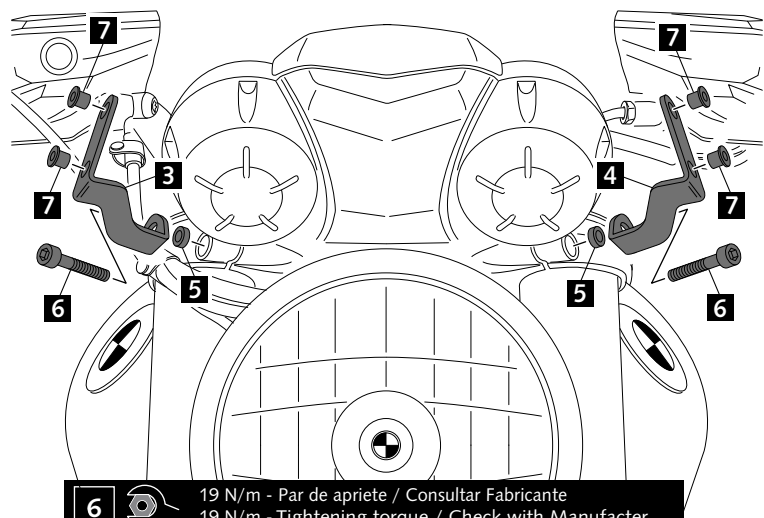

3

**ASSEMBLY
MONTAJE**

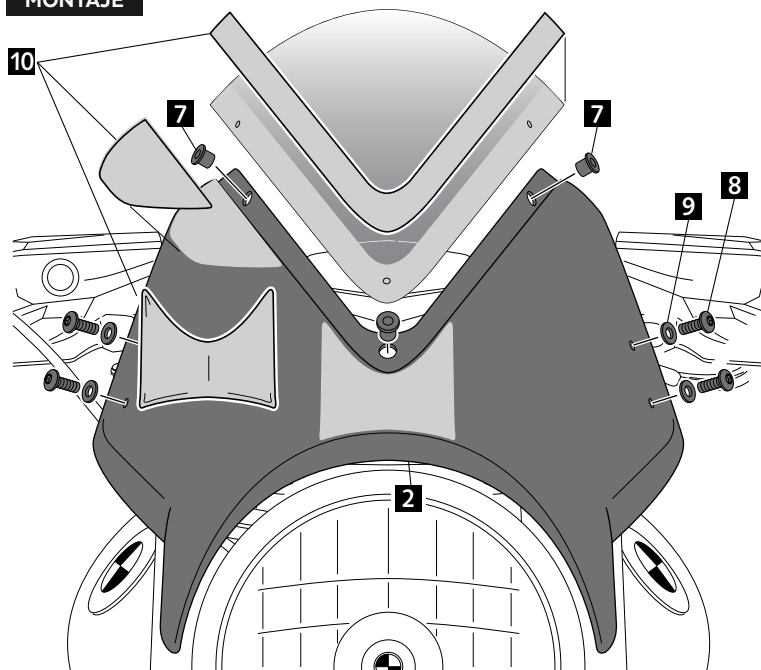

4

**ASSEMBLY
MONTAJE**

