



RETROVISION PARA - RETROVISION WINDSCREEN FOR - WINDSCHUTZSCHEIBE RETROVISION FÜR BMW R NINE T SCRAMBLER

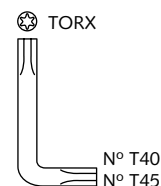

Ref.: 9338
(Black fairing)

Ref.: 9339
(Carbon look fairing)



1 persona
1 person



10 min

Fácil - Easy





Media-Intermediate

Difícil-Difficult

ID	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF.
1		Cúpula	Screen	1	1517 F/H/N/W
2		Carcasa ABS	ABS fairing	1	10562 NM3 10562 CM3
3		Soporte metálico derecho (R)	Right metal support (R)	1	SOPOR-2P-1-9338
4		Soporte metálico izquierdo (L)	Left metal support (L)	1	SOPOR-2P-1-9338
5		Tornillo Allen M5x16 ISO 7380	M5x16 ISO 7380 Allen screw	7	TORNI-I7380-493
6		Silentblock M5	Silentblock M5	7	SILENBTM5-046/1
7		Arandela de nylon M5x0,5	M5x0,5 Nylon washer	7	ARNV0000000245
8		Tornillo Allen M8x35 DIN 912	M8x35 DIN 912 Allen screw	2	TORNI-AD912-196
9		Casquillo Ø int. 8,5 x Ø ext. 14x9	Ø inner 8,5 x Ø outer 14x9 Arrowhead	2	CASQUI____0100
10		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Allen screw cap	7	TAPON____85
11		Kit adhesivos	Stickers set	1	ADHESI____207 ADHESI____208

RETROVISION PARA - RETROVISION WINDSCREEN FOR -
 WINDSCHUTZSCHEIBE RETROVISION FÜR
BMW R NINE T SCRAMBLER

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

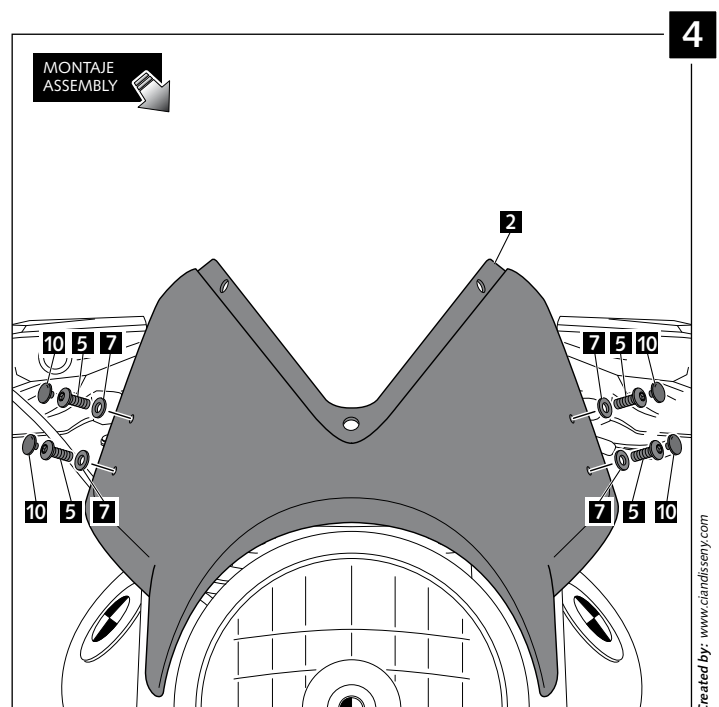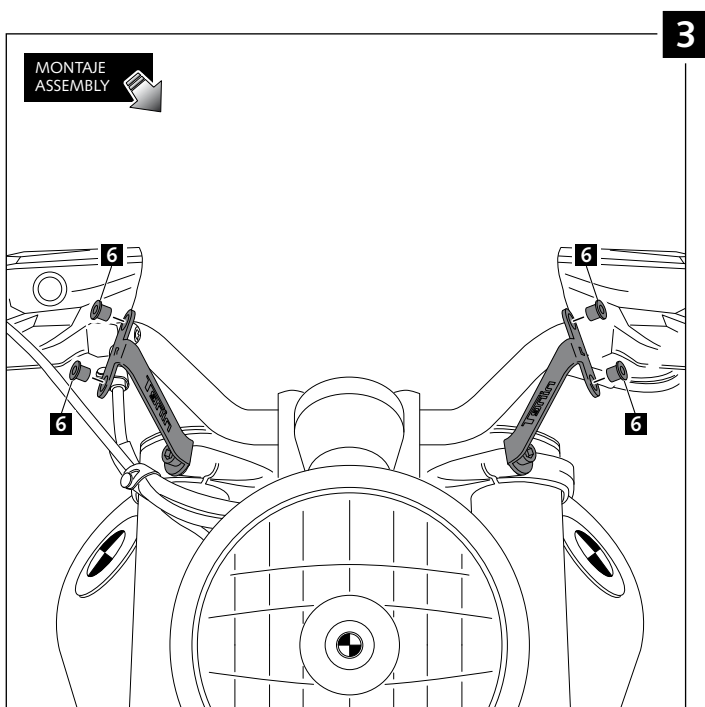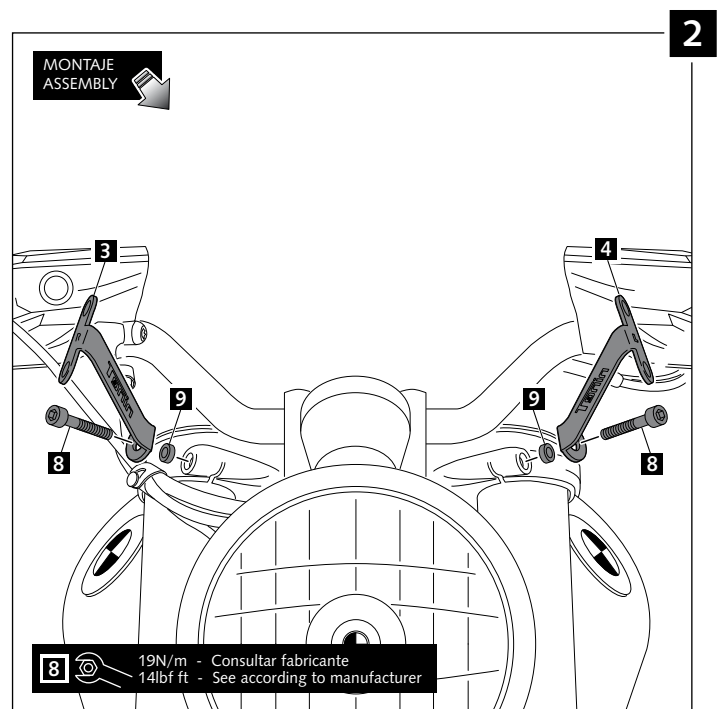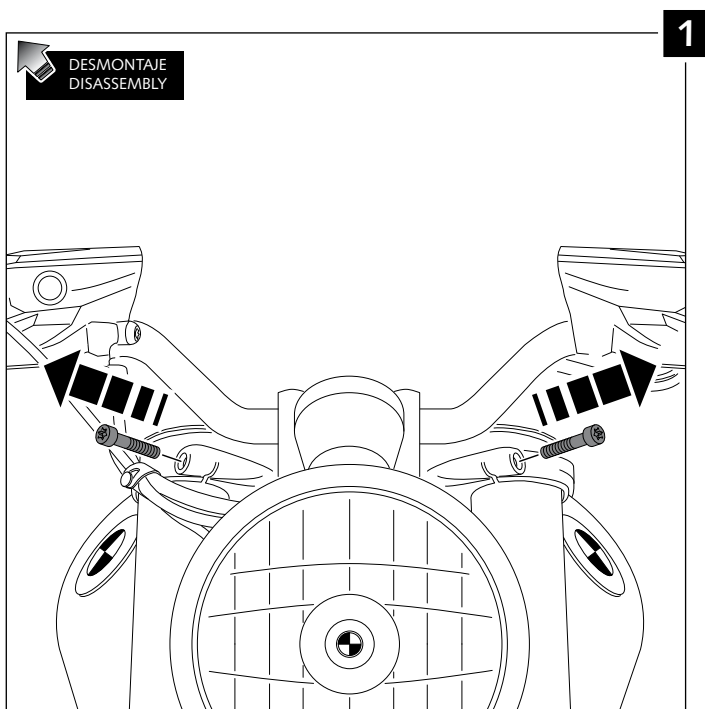

RETROVISION PARA - RETROVISION WINDSCREEN FOR -
 WINDSCHUTZSCHEIBE RETROVISION FÜR
BMW R NINE T SCRAMBLER

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

