



Thank you for purchasing a National Cycle product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windscreen for a customer, please give them this manual. It contains information needed to properly maintain and use this product.



**Attention:**

Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.



**Note:**

Tips for facilitation of operation, control and adjustment, as well as maintenance work.

**CONTENTS OF KIT**

Item	Description	Part No.	Qty.	Notes and Installation Tools
1	VStream® Windscreen	(N20315 shown)	1	
<b>HARDWARE KIT</b>				
2	Bracket	37-374470-000	1	5mm Hex Wrench
<b>Bag#1175</b>				
3	Grommet	44-447350-000	4	
4	Cap, Aluminum, Black	34-346047-000	4	
5	Screw, Flat, M6 x 20	51-514221-000	4	4mm Hex Wrench
6	Collar, .354 L	49-495592-000	4	
7	Nut, Flange M6	42-483005-000	4	10mm Box Wrench
8	Spacer, Black	44-443542-000	2	



Bag#1175



**TOOLS**

5mm and 4mm Hex Wrench  
 10mm Box Wrench





Figure 1



Figure 2

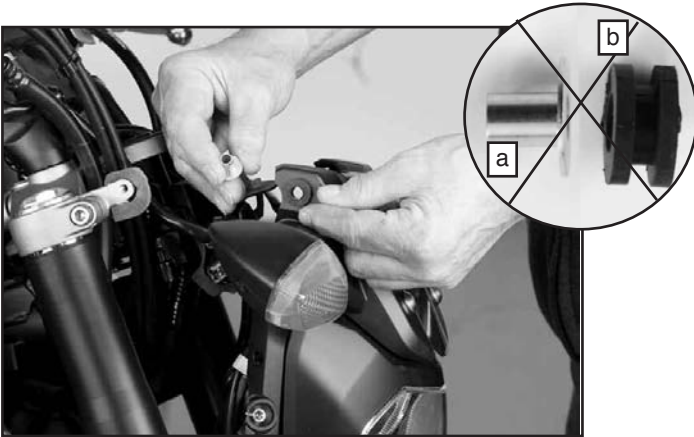


Figure 3



Figure 4

## PREPARATION

1. Position motorcycle securely on its side stand.

## INSTALLATION

### Installation of new Spacer from Bag#1175

1. Remove stock screws from the right and left side of the headlight cover. These screws will be re-used.

**(5mm Hex Key) Figure 1**

2. Rotate headlight assembly forward.

**Figure 2**

3. Remove the stock spacer (a) and rubber bushing (b) from the headlight cover. These parts will not be re-used.

**Figure 3 and 4**

4. When parts are removed headlight cover will appear as shown in Figure 4.

**Figure 4**



Figure 5



Figure 6

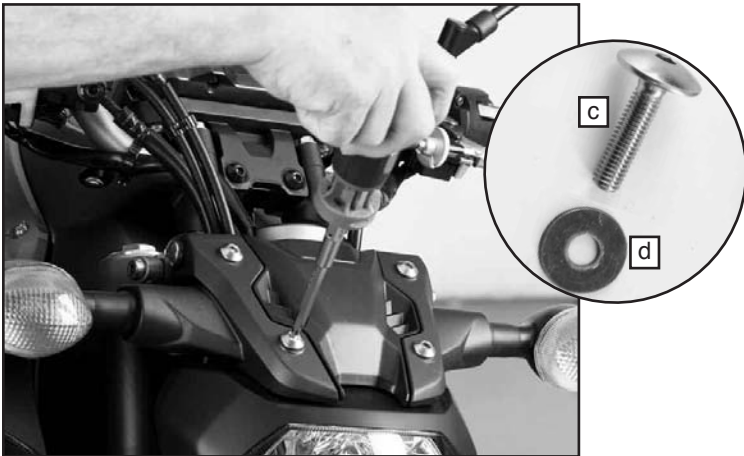


Figure 7



Figure 8

## INSTALLATION Continued

5. From the outside of the headlight cover, install Spacers (8) into the holes on the left and right sides of the motorcycle.

**Figure 5**

6. Swing headlight housing back into place. Replace stock screws. **Tighten firmly.**

**Figure 6 (5mm Hex Key)**

7. Remove the stock screws (c) and the washer (d) from the front of the headlight cover. These screws will be re-used.

**Figure 7 (5mm Hex Key)**

## Install Bracket

8. Place Bracket (2) onto headlight cover. Install Bracket using the four stock screws and washers. **Tighten firmly.**

**(5mm Hex Key) Figure 8**

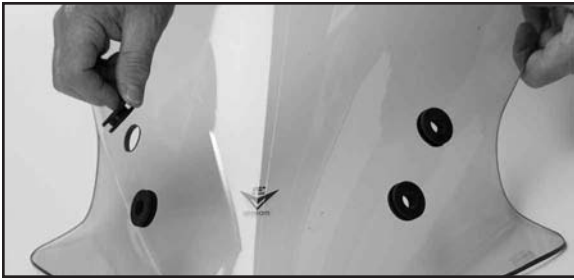


Figure 9

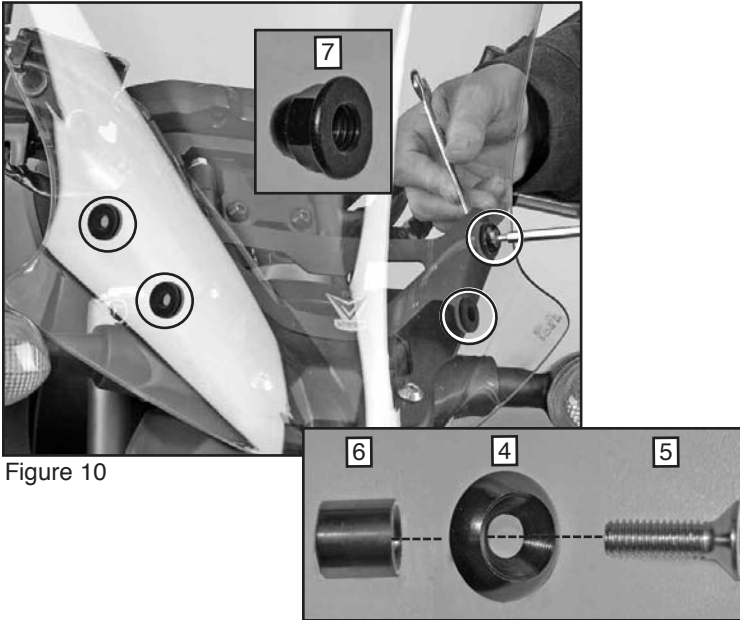


Figure 10

## INSTALLATION Continued

9. Install one Grommet (3) into each hole on the windscreen.

**Figure 9**

### Install Windscreen To Bracket

10. Make four screw assemblies using one each:

- M6 Flat Screw (5)
- Cap (4)
- Collar (6)

Install windscreen onto Bracket using the four screw assemblies and Nut (7). Repeat procedure at all four holes. **Tighten screws firmly.** **Figure 10. (3mm Hex Key and Box Wrench)**



Ask for Shield Wash™ and RainZip® at your local dealer or visit [www.nationalcycle.com](http://www.nationalcycle.com).

## CLEANING AND MAINTENANCE

To clean the screen, wash with a clean soft cloth, plenty of warm water and, if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. **Paint, glue residue or grease removal:** Moisten cotton with naphtha or turpentine followed by a wash as above.

National Cycle **Shield Wash™** (N1401-01) makes a good daily cleaner and comes with a handy travel-size bottle. Shield Wash is safe for all windshields and helmet visors.

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with glass cleaners.

Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

## RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's **RainZip®** (N1410-01) to keep your windshield clear in rainy weather.

## WARNING

Fahren Sie Ihr Motorrad niemals mit losen Zubehörteilen. Überprüfen Sie die Halterungen regelmäßig auf festen Sitz.

Die heutigen Motorräder sind mit einer ausreichenden Rahmensteifigkeit gebaut, um den moderaten Belastungen standzuhalten, die durch die absehbare Hinzufügung eines oder mehrerer Zubehörteile auf sie ausgeübt werden. Wenn ein oder mehrere Zubehörteile die Stabilität Ihres Motorrads beeinträchtigen, entfernen Sie sofort das / die Zubehörteil (e). Nehmen Sie kein Motorrad in Betrieb, das unsichere Fahreigenschaften aufweist.

Lassen Sie das Problem von erfahrenem Servicepersonal beheben, bevor Sie mit installiertem Zubehör fahren. Bei weiteren Fragen zu Handhabungsproblemen im Zusammenhang mit einem oder mehreren Zubehörteilen wenden Sie sich bitte an Ihren Händler, Motorradhersteller oder Zubehörhersteller.

Sonnenlicht, das von der inneren Krümmung der Windschutzscheibe reflektiert wird, kann zu bestimmten Tageszeiten zu einem extremen Wärmestau auf den Instrumenten des Motorrads führen und diese möglicherweise sogar zum Schmelzen bringen. Gehen Sie beim Parken vorsichtig vor, um dies zu vermeiden. Stellen Sie Ihr Motorrad in Richtung Sonne ab oder platzieren Sie einen undurchsichtigen Gegenstand über diesem Bereich.