

Attention



Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.



Note:



Tips for facilitation of operation, control and adjustment, as well as maintenance work.



Right and left side of motorcycle is determined while sitting on the bike.

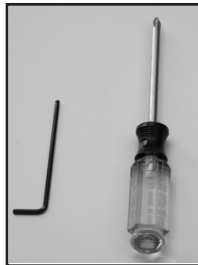


TOOLS REQUIRED:

3mm Hex Key
 Phillips Screwdriver

PARTS LIST

<u>Index</u>	<u>Description</u>	<u>Qty.</u>
1	Windshield, Hard Coated Lexan® polycarbonate	1
Bag#1103		
2	Screws, M5 Nylon Black	6

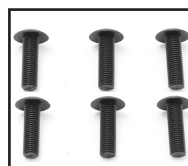

Bag#1103

INSTALLATION



Stock nylon screws or Nylon Screws (2) from Bag#1103 may be used during installation.

1. Remove the 2 screws holding plastic front plate to top surface of windscreen. **Figure 1 (3mm Hex Key)**
2. Remove front plate.
3. Remove the 6 screws holding the stock windscreen to the motorcycle. **(Phillips Screwdriver)**
4. Place VStream Windscreen into position on motorcycle. Secure at all 6 locations with the stock screws or replacement Screws (2). Tighten the screws firmly. **Do not over tighten. Figure 2 (Phillips Screwdriver)**
5. Re-install front plate on outside of windscreen using stock screws. **(3mm Hex Key)**



Figure 1

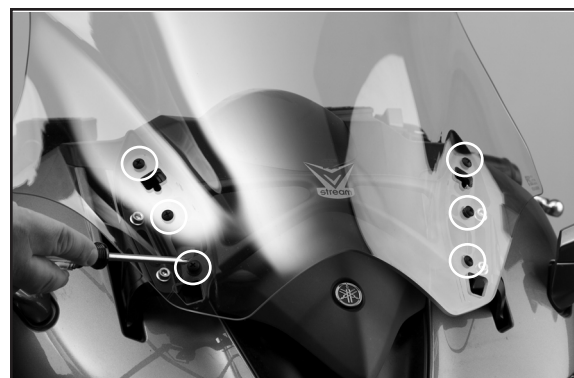


Figure 2

MAINTENANCE

To clean the screen, wash with a clean soft cloth, plenty of warm water and if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. **Paint, glue residue or grease removal:** Moisten cotton with Naphtha or Turpentine followed by a wash as above. National Cycle **Shield Wash™** makes a good daily cleaner and comes with a handy travel size bottle. N1401-01 Shield Wash is safe for all windshields and helmet visors.

Do not clean polycarbonate in hot sun or high temperatures. Do not clean the screen with glass cleaners.

Do not allow brake fluid, alcohol, or strong solvents to contact the screen.

RAIN REPELLENT

Do not use rain protective products made for glass. We recommend National Cycle's **RainZip®** which is safe for all windshields and faceshields. (Part No. N1410-01).



N1401-01



N1410-01

! WARNING

Fahren Sie Ihr Motorrad niemals mit losen Zubehörteilen. Überprüfen Sie die Halterungen regelmäßig auf festen Sitz.

Die heutigen Motorräder sind mit einer ausreichenden Rahmensteifigkeit gebaut, um den moderaten Belastungen standzuhalten, die durch die absehbare Hinzufügung eines oder mehrerer Zubehörteile auf sie ausgeübt werden. Wenn ein oder mehrere Zubehörteile die Stabilität Ihres Motorrads beeinträchtigen, entfernen Sie sofort das / die Zubehörteil (e). Nehmen Sie kein Motorrad in Betrieb, das unsichere Fahreigenschaften aufweist.

Lassen Sie das Problem von erfahrenem Servicepersonal beheben, bevor Sie mit installiertem Zubehör fahren. Bei weiteren Fragen zu Handhabungsproblemen im Zusammenhang mit einem oder mehreren Zubehörteilen wenden Sie sich bitte an Ihren Händler, Motorradhersteller oder Zubehörhersteller.

Sonnenlicht, das von der inneren Krümmung der Windschutzscheibe reflektiert wird, kann zu bestimmten Tageszeiten zu einem extremen Wärmestau auf den Instrumenten des Motorrads führen und diese möglicherweise sogar zum Schmelzen bringen. Gehen Sie beim Parken vorsichtig vor, um dies zu vermeiden. Stellen Sie Ihr Motorrad in Richtung Sonne ab oder platzieren Sie einen undurchsichtigen Gegenstand über diesem Bereich.